


S/W USB Update Manual(1/2)




1. Copy upgrade files ("micom.bin", "update.zip") to SD-card root folder.




2. Connect the USB memory stick to the USB cable.

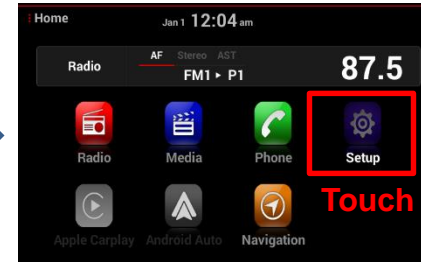

3. Touch "Einstellungen" (Setup) icon

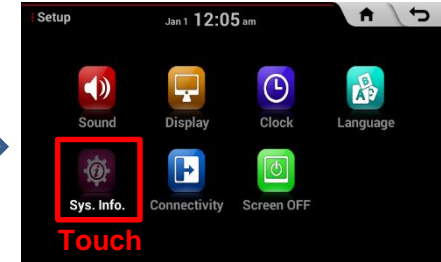


4. Touch "Sys.-Infos" (System Info) icon

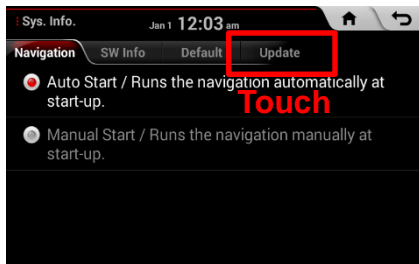

5. Touch "Aktualisieren" (Update) button



6. Touch "System" icon button

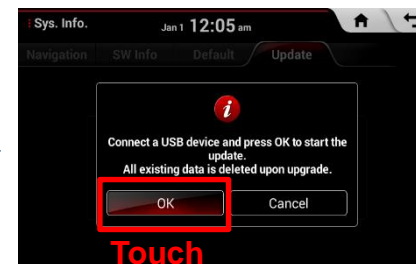

7. Touch "OK" button




8. after rebooting, the system will be updated.
*** DO NOT REMOVE THE USB MEMORY STICK OR POWER**

S/W USB Update Manual(2/2)




10. Rebooting start

*** DO NOT REMOVE THE USB MEMORY STICK OR POWER**

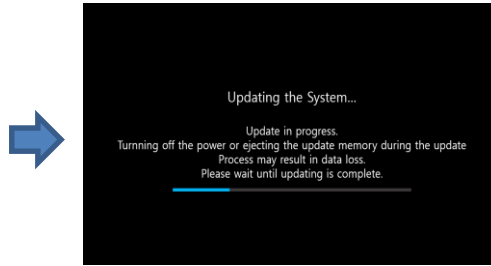


11. System update start

*** DO NOT REMOVE THE USB MEMORY STICK OR POWER**

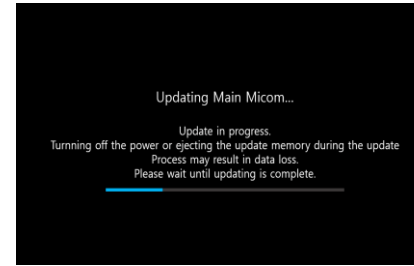


12. Micom update start

*** DO NOT REMOVE THE USB MEMORY STICK OR POWER**

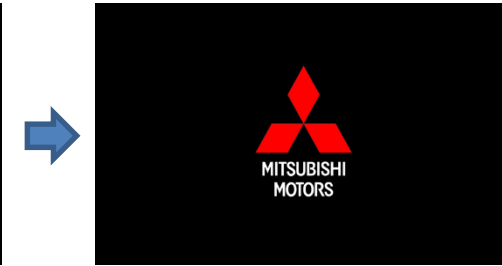

13. After update complete, system rebooting.


*** DO NOT REMOVE THE USB MEMORY STICK OR POWER**

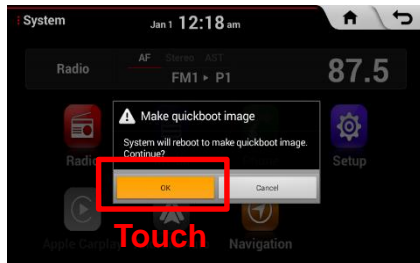


13. Booting complete.

"non_quickboot" mode

S/W USB Update Manual – Make Quickboot image

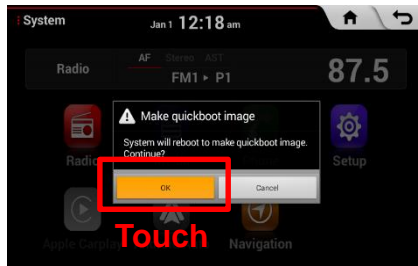

1. Make Quick Boot Image.
after updating, POP-UP about Making Quick Boot Image will be occurred. and press "OK" button.
After making Quick Boot Image, the update is complete.

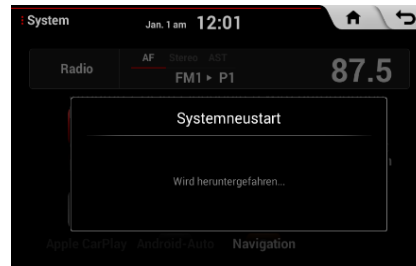

2. after rebooting, the system will be make a quick boot image.




3. Rebooting start




4. The system will make a quick boot image.



5. After creating the quickboot mode completing, system reboot.

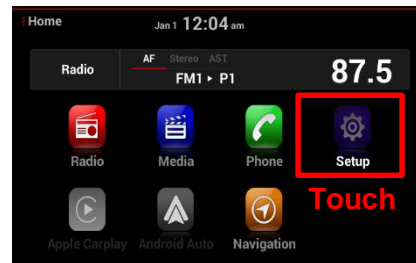

6. Again MAIN Screen.
(Quickboot mode)
And Touch "Einstellungen" (Setup) icon

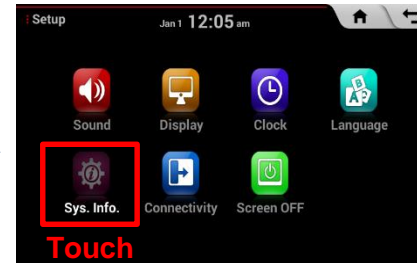

7. Touch "Sys.-Infos" (System Info) icon



8. Check "Model Name" and "AV Micom Version".
(In SW-info menu)